

MISCELLANEOUS TOOLS

TREAD DEPTH GAUGES & TIRE EQUIPMENT



**DIGITAL TREAD
DEPTH GAUGE**

DIGITAL TIRE TREAD DEPTH GAUGE

A straightforward and simple to use Digital Tire Tread Depth gauge measurement device with three different read settings. PCL's Digital Tire Tread Depth Gauge is suitable for tire tread depth or brake shoe and pad wear.

SPECIFICATIONS

Reading Accuracy:	1/64 in.
Calibration:	0-1 in.

KEY BENEFITS

Lightweight, made of carbon fiber composite
Metric, decimal inch and fraction inch toggle

PART # DESCRIPTION

DTDG1D04	DIGITAL TREAD DEPTH GAUGE
-----------------	---------------------------



**DIGITAL TIRE
PRESSURE & TREAD
DEPTH GAUGE**

DIGITAL TIRE PRESSURE & TREAD DEPTH GAUGE

This 3-in-1 Digital Tire Pressure and Tread Depth Gauge is self-calibrating and features a 90 second auto power-off. The DTPG7 can be found in tire shops, service centers, auto dealerships, and more.

TIRE PRESSURE SPECIFICATIONS

Reading Accuracy:	0.1 psi
Calibration:	2-100 psi
Accuracy:	+/- 1.5%

TREAD DEPTH SPECIFICATIONS

Reading Accuracy:	0.001 in.
Calibration:	0-0.5 in.
Accuracy:	+/- 0.007 in.

PART # DESCRIPTION

DTPG7	DIGITAL TIRE PRESSURE & TREAD DEPTH GAUGE
--------------	---



**TREAD DEPTH
GAUGE**

TREAD DEPTH GAUGE

PCL's "Made in Sheffield" Tire Tread Depth Gauge is manufactured to strict quality standards and is VOSA approved for MoT testing. Easy to read, and has a handy pocket clip.

SPECIFICATIONS

Reading Accuracy:	1/64 in.
Calibration:	0-1 in.
Calibration:	0-1 in.

KEY BENEFITS

Lightweight, made of carbon fiber composite
Metric, decimal inch and fraction inch toggle
Metric, decimal inch and fraction inch toggle

PART # DESCRIPTION

DTDG1D04	DIGITAL TREAD DEPTH GAUGE
-----------------	---------------------------



**TIRE VALVE
TOOL**

TIRE VALVE TOOL

A simple to use, versatile 4-in-1 Tire Valve Tool that helps you look after your tire valves. The Tire Valve Tool is manufactured from case-hardened mild steel and has a zinc-plated finish.

4-IN-ONE KEY FUNCTIONS

- | | |
|---|--------------------------------------|
| 1) Re-thread the external part of the tire valve stem | 3) Remove the tire valve core |
| 2) Re-thread the inside of the tire valve stem | 4) Extract a damaged tire valve core |

PART # DESCRIPTION

TVT81	4-IN-ONE TIRE VALVE TOOL
--------------	--------------------------